

# **END CAP ADAPTOR**

(ABS021/27 - 27mm)

The capillary end cap is used when it is necessary to sample air not only in the pipe run, but also at the end of the pipe run.

It fits directly onto the end of the 27mm pipe.


There is a 10mm hole in the end cap, which attaches normally to a 10mm OD nylon tube of a pre-determined length to which it is possible to attach either a discrete flush or a conical sampling head.

## **Installation Instructions:**

Use the correct solvent Plusbond 3019. Do not paint.

Keep pipe clean and free from dust.
Do not install in direct sunlight.
Only install with approved pipe.
Do not use solvents to clean,
only soapy water.

Part No. ABS021/27
Fitting color RED
Diameter Tolerance +/- 0.15mm

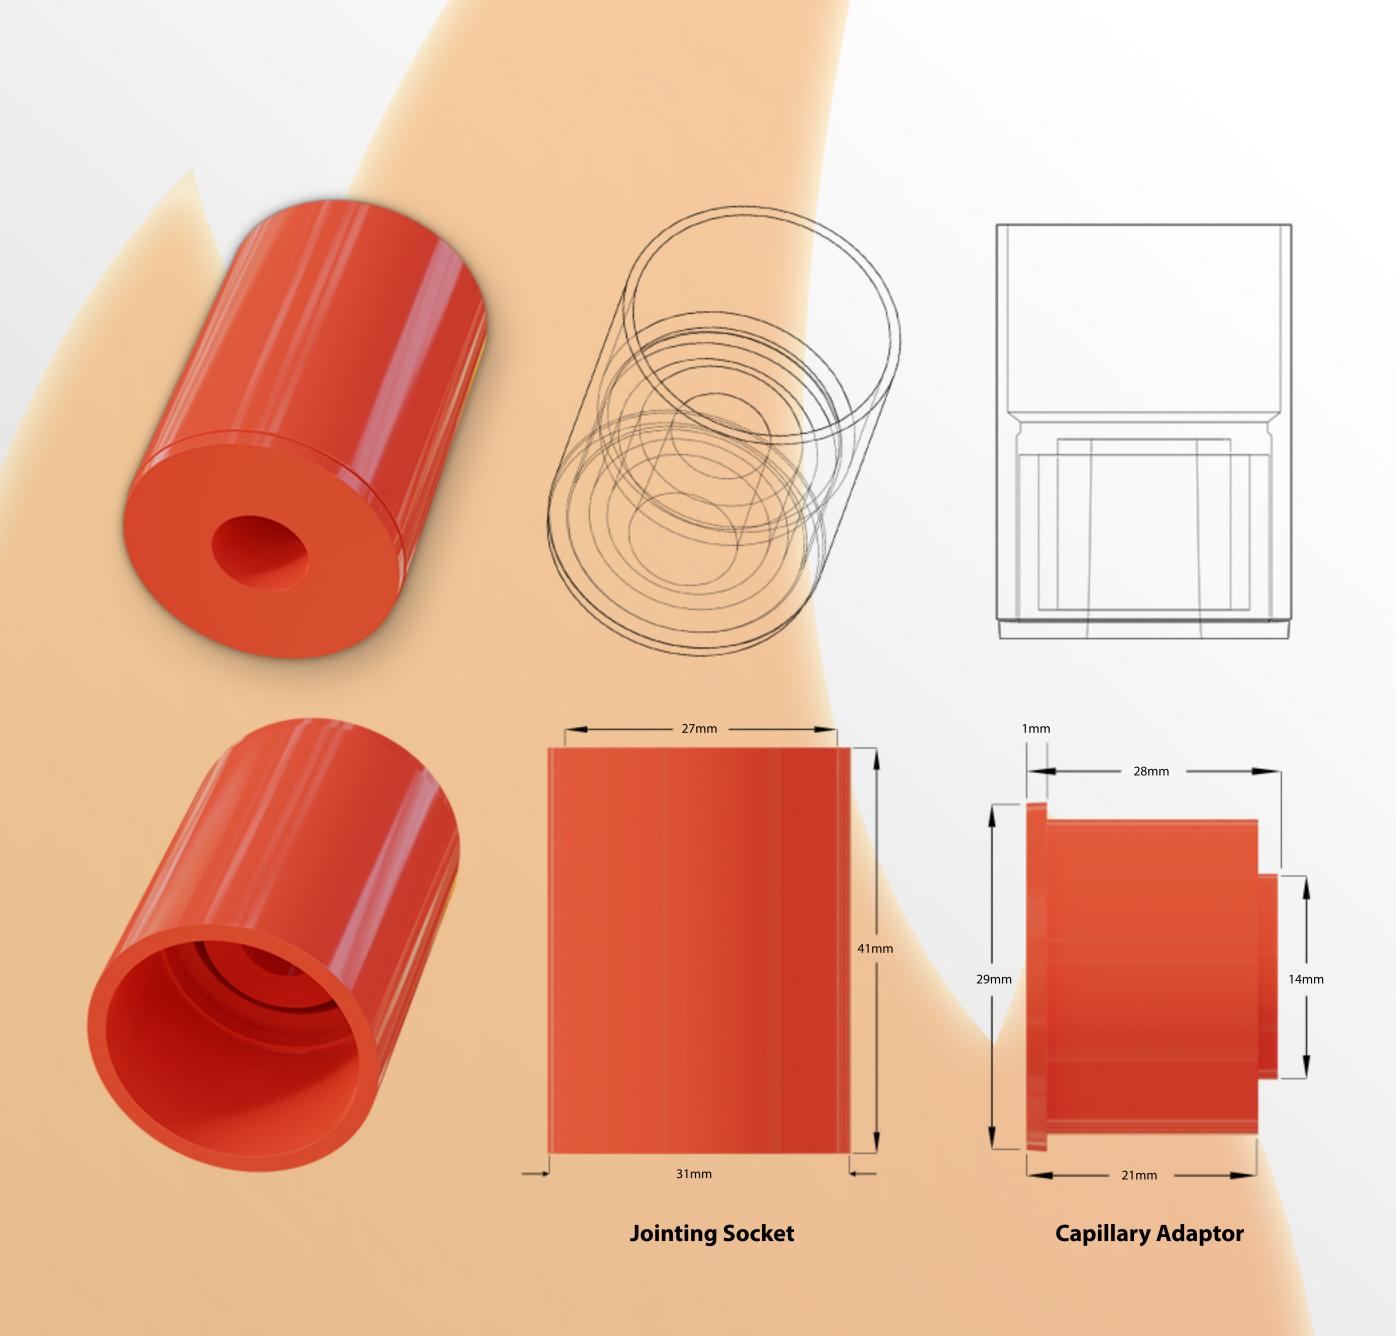

#### RAW MATERIAL DATA

Kumho ABS 750

Acrylonitrile Butaduene Styrene

#### Pysical:

Specific Gravity 1.04
Test Method ASTM D792

Melt Mass - Flow Rate (MFR) 200°C/21.6 kg 47 g/10 min 200°C/5.0 kg 4.1 g/10 min 220°C/10.0 kg 34 g/10 min Test Method ASTM D1238

Molding Shrinkage -Flow 0.0040 to 0.0070 in/in Test Method ASTM D955

#### **Mechanical:**

Tensile Strength
Yield, 73°F (23°C)
1.97 in (50.0mm)
6670 psi
Test Method ASTM D638

rest method / S / m Doso

#### Tensile Elongation

Yield, 73°F (23°C) 1.97 in (50.0 mm), 15% Test Method ASTM D638

#### Flexural Modulus

Yield, 73°F (23°C) 0.118 in (3.00 mm) 312000 psi Test Method ASTM D638

### Flexural Strength

Yield, 73°F (23°C) 0.118 in (3.00 mm) 9230 psi Test Method ASTM D790

#### <u>Impact</u>

Noched Izod Impact 73°F(23°C), 0.126 in (3.20 mm), 5.5 ft·lb/ir 73°F(23°C), 0.252 in (6.40 mm), 4.8 ft·lb/ir Test Method ASTM D256

#### <u>Hardness</u>

Rockwell Hardness (R-Scale) 108 Test Method ASTM D785

#### Γhermal

Deflection Temperature Under Load 264 psi (1.8 MPa), Unanneald 185°F/85°C Test Method ASTM D648

Vicat Softening Temperature 203°F/95°C Test Method ASTM D1525

### <u>Flamibility</u>

Flame Rating 0.0630 in (1.60 mm) HB 0.0866 in (2.20 mm) HB 0.126 in (3.20 mm) HB Test Method UL 94

Fire Suppression Limited Unit 11, Eldonwall Trading Estate, St.Phillips, Bristol, BS4 3QQ

Tel: 0845-127-9915 Fax: 0845-127-9959 sales@firesuppression.co.uk